

Springdale Fire Department
Policy & Procedures Manual
Volume 1 – Administration
Section 104 – Apparatus and Vehicles
104.7 – Fueling Apparatus, Vehicles, and Equipment

SFD vehicles shall be re-fueled at the one-half of tank capacity mark.

Fuel for SFD apparatus, vehicles, and equipment is purchased at the Fuels and Supplies Fuel Farm located at Highland Avenue and Young Street.

The fuel card kept in each SFD vehicle is to be used exclusively for that vehicle and for portable equipment associated with that vehicle and fire station.

Vehicles shall not be re-fueled while the engine is running. There shall be no smoking around the fuel farm.

When activating the appropriate pump to obtain fuel:

- Slide the card as directed in the station card reader
- Follow the instructions provided by the fuel card reader display
- Always enter the PIN number of the vehicle's card
- Always enter the correct odometer reading (Not required when purchasing fuel for portable equipment)